

Original Post on github (for Tesla P40): JingShing/How-to-use-tesla-p40: A manual for helping using tesla p40 gpu (github.com)

Seems you need to make some registry setting changes:

After installing the driver, you may notice that the Tesla P4 graphics card is not detected in the Task Manager. Therefore, you need to modify the registry.

Please press WIN + R to open the Run window, then enter regedit to get into register table, and then enter HKEY\_LOCAL\_MACHINE\SYSTEM\ControlSet001\Control\Class\{4d36e968-e325-11ce-bfc1-08002be10318}\0001 in path to modify its content.

Modify AdapterType to 1

Modify FeatureScore to d1

Add Dword:

Fill in 1 for EnableMsHybrid

Fill in 7 for GridLicensedFeatures

After modifying the registry, you can choose to restart or disable and enable P40 in the device manager to see that P40 has been successfully called in the Task Manager.

I am using the Dacacenter drivers, the GRID drivers did make it also “happen” (show the GPU in task manager), yet plex is not able to use HW encoding.

With the settings above I was able to get plex to transcode

From:  
<https://wiki.cnelson.tech/> - **Chris Nelson's Wiki**

Permanent link:  
[https://wiki.cnelson.tech/doku.php?id=plex:tesla\\_p4\\_transcoding\\_in\\_windows\\_server\\_2022&rev=1694628140](https://wiki.cnelson.tech/doku.php?id=plex:tesla_p4_transcoding_in_windows_server_2022&rev=1694628140)

Last update: **2023/09/13 18:02**

